


Can Am Gen 1 400/500 Outlander Lift Kit Installation

Front Lift

-Jack up the front of the ATV and remove both front shocks.

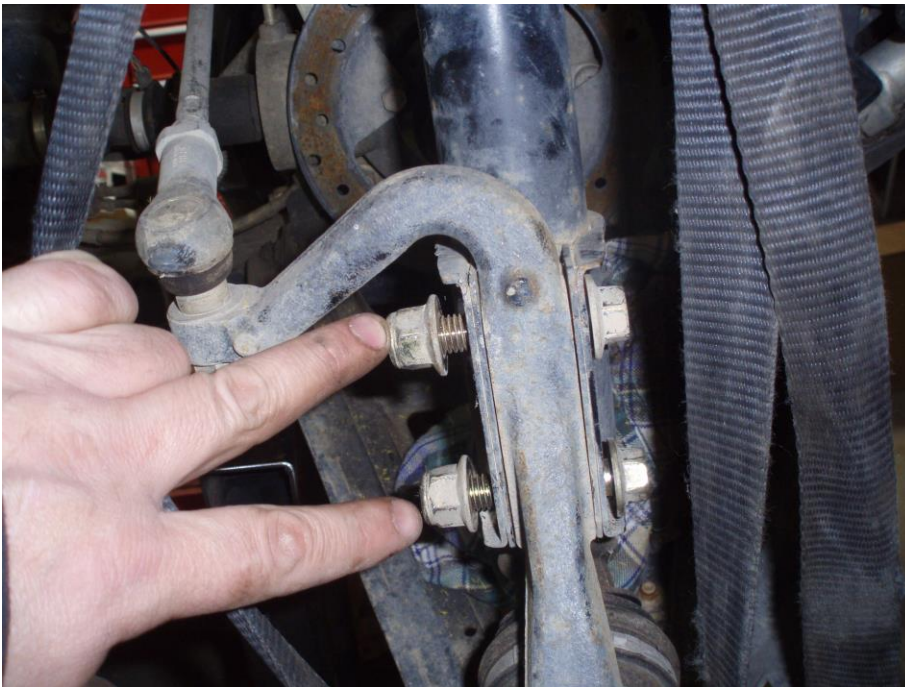

-After the shocks are out, compress the springs and remove the retaining cap to pull the spring off.

TIP***

Compressing the springs can be a chore, I have found the easiest way to do this is by putting one end in a vise and using 3 or more ratchet straps and compress the spring, HOWEVER when you let the straps back out, let out one strap at a time and once it is loose, snug it back up, then let out the next one and repeat until the spring is fully released.

-Put the spacers WITHOUT the slots onto the shocks and then slide the springs back onto the shocks.

-Compress the springs and re-install the spring retaining cap and re-install the front shocks.




Rear Lift

-Lift the rear of the ATV and remove the rear shocks

-After the shocks are out, compress the springs and remove the retaining cap enough to replace it with the SLOTTED spacer on top of the spring.

-Re-install the rear shocks

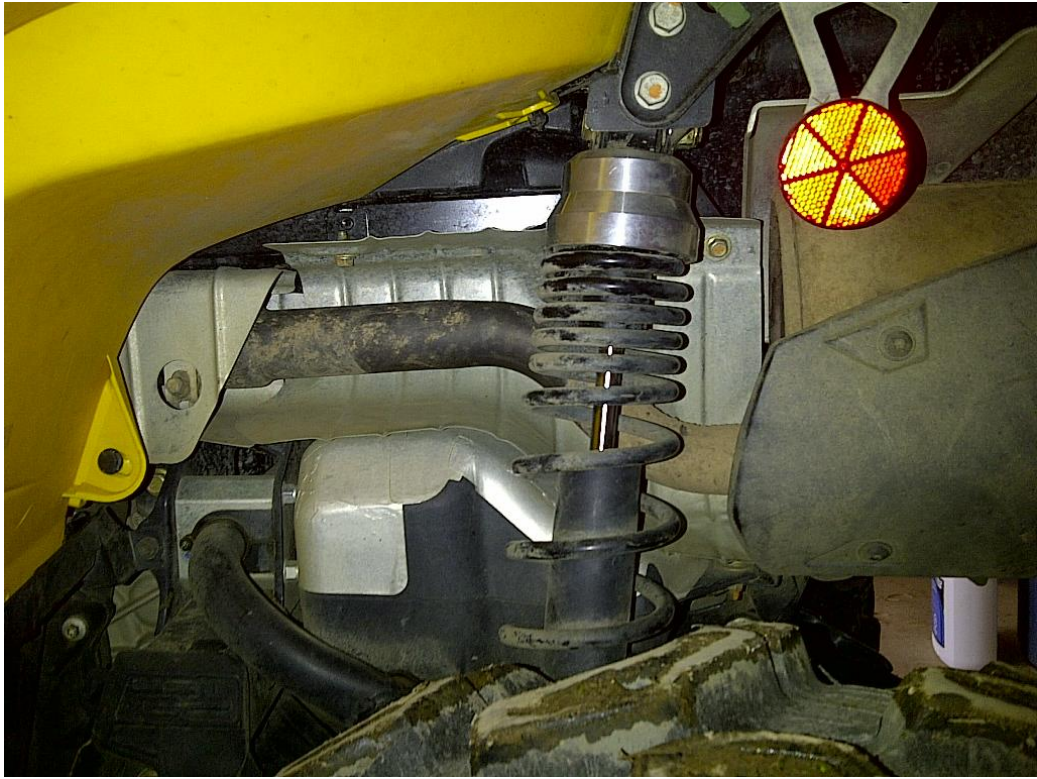

FINISHED