

Parts included in this kit



Installing the Front Lift Kit

- Jack up the front of the ATV and remove both front tires so you have more room to work.
 - Remove the top shock mounting bolts and pull the top end of the shock outward away from the frame.
- Slide Part # 1 all the way across in front of the frame cross channel as pictured.






-Place part # 2 and the appropriate aluminum spacer inside the frame channel together and install one of the 10mm bolts to secure the parts in place, do this on BOTH sides but do not tighten the nuts all the way just yet.



-Install the top of the shock into its new mounting location with a 10mm bolt as pictured. As you can see, one bolt goes one direction, and one bolt goes the other direction, this was due to a clearance issue getting the bolts in place.

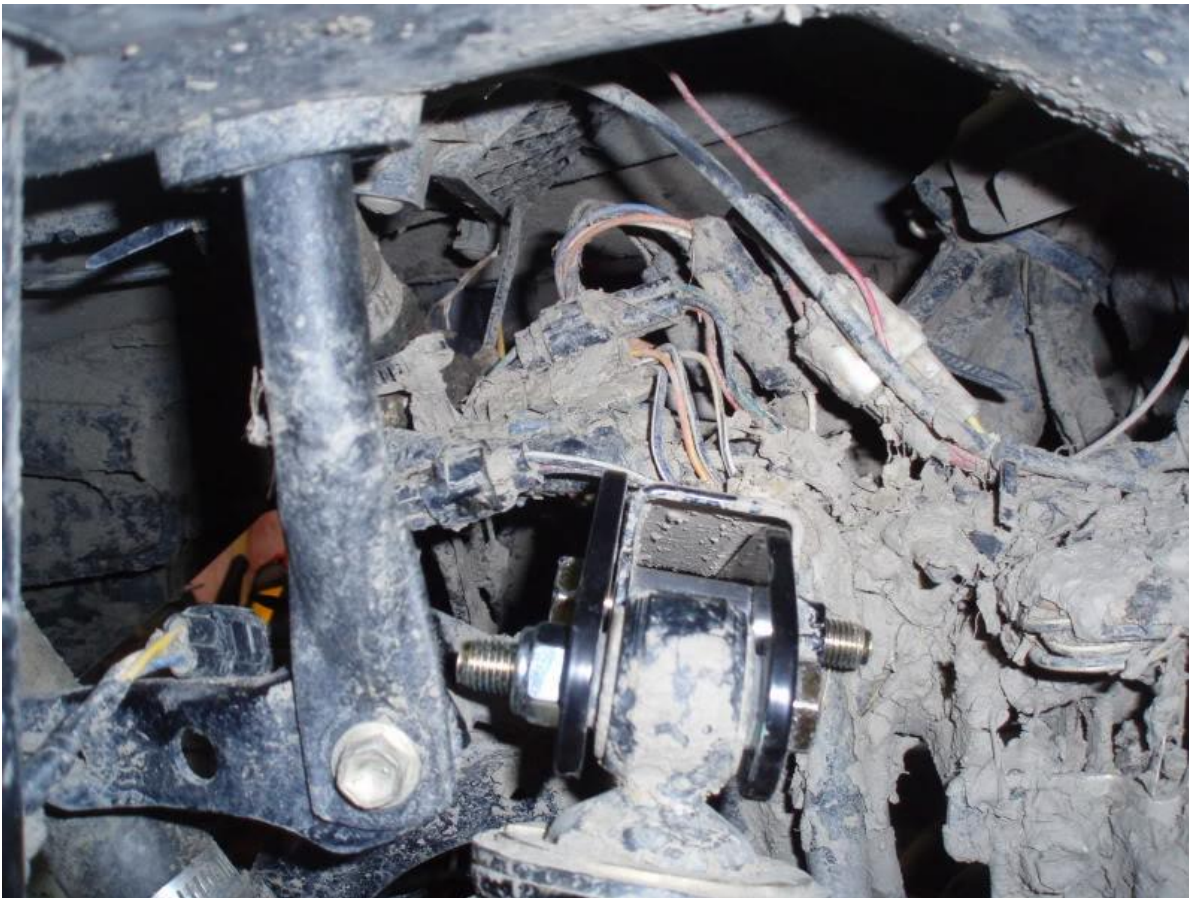

-Put the tires back on and the front is finished!

Rear Kit Installation

- Jack up the ATV and remove both rear tires**
- Remove the factory a-arm gaurds**
- Remove the lower shock mounting bolt**
- Install the rear kit as pictured below with plate #4 at the rear of the machine, and plate #3 inside the stock mounting channel with an aluminum spacer installed in the stock mounting hole and channel.**







-Put the tires back and you are finished.